

ENCLOSURE ZERO U UNIVERSAL, BLACK

1. SCOPE

This document will describe the application instructions for **ZERO U ENCLOSURE**.

2. PRODUCT DESCRIPTION


ENCLOSURE ZERO U UNIVERSAL, BLACK

For additional information refer PSD_ 180670024


3. INSTALLATION PROCEDURE.

For fiber/Copper solution

Step 1:, Unscrew the CSK screws fixed on the top cover as shown location below and open the top cover plate from the base enclosure (Top cover can open up to 180°).

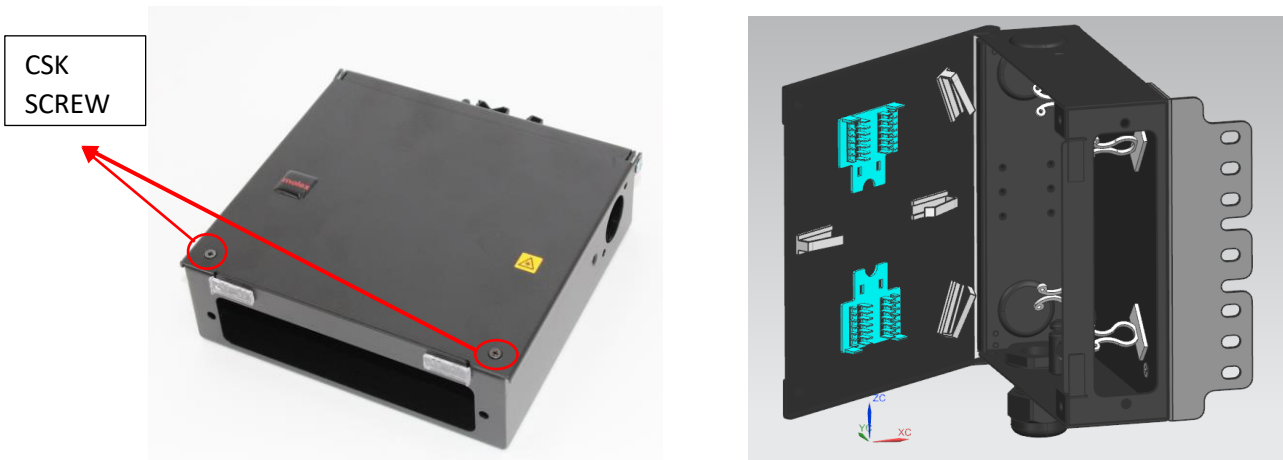


Step 2: Install the Zero Brackets using CSK screw's as shown.

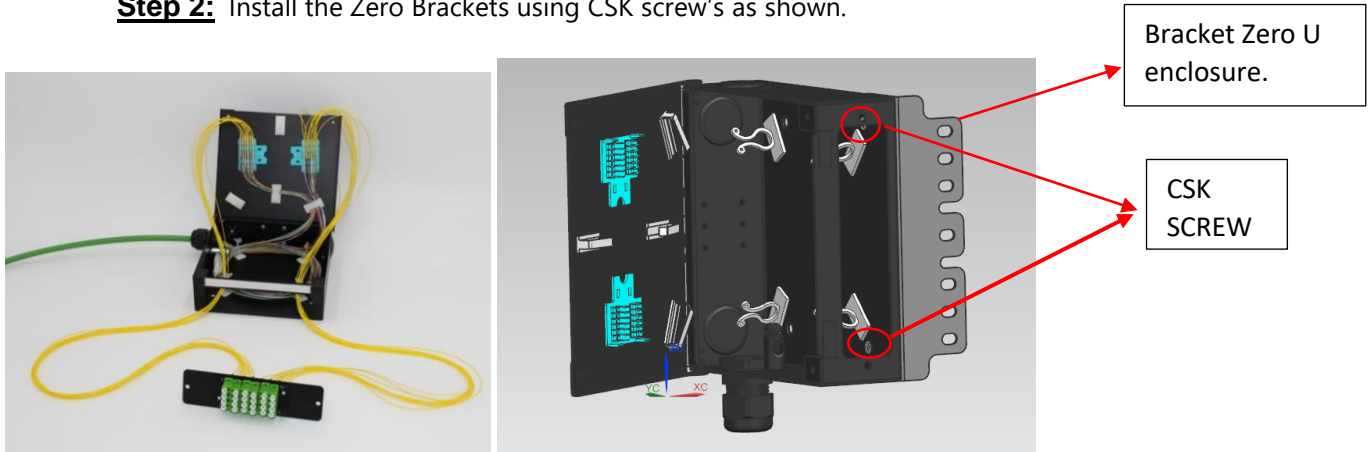


ENGINEERING RECORD NO : 792300	SAP NO : 187000584	Doc No: 187000584	Doc part: AS	REV- A
http://www.molexces.com				

Step 3: Close the Top cover and screw it.

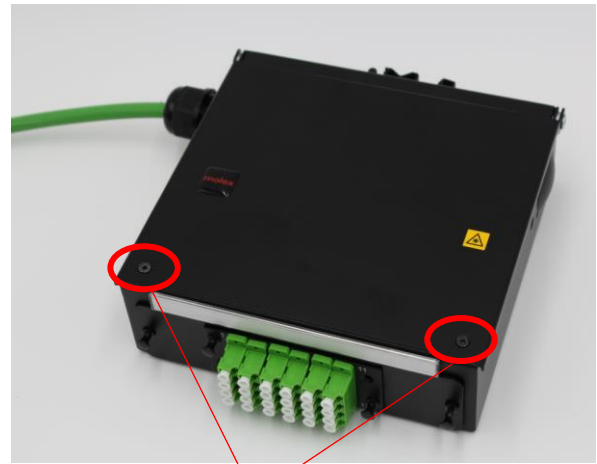

Screws

Step 4: Install the assembled enclosure to the 19th Inch Rack using standard mounting accessories.

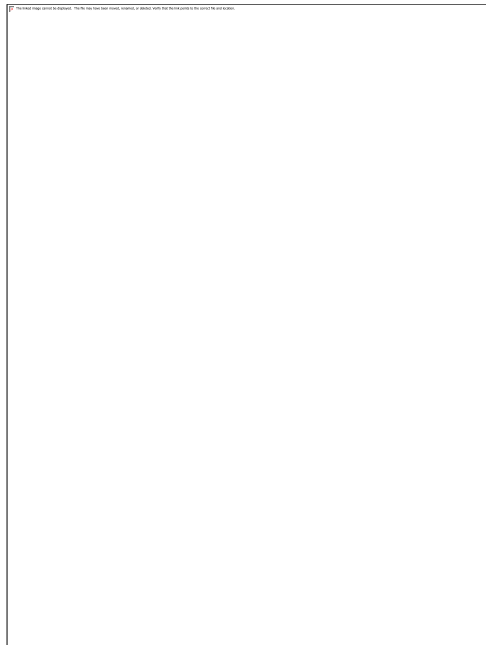

Note: All pictures are shown only for representation purpose only.